


**MSB WITH SPACER PARTS LIST**

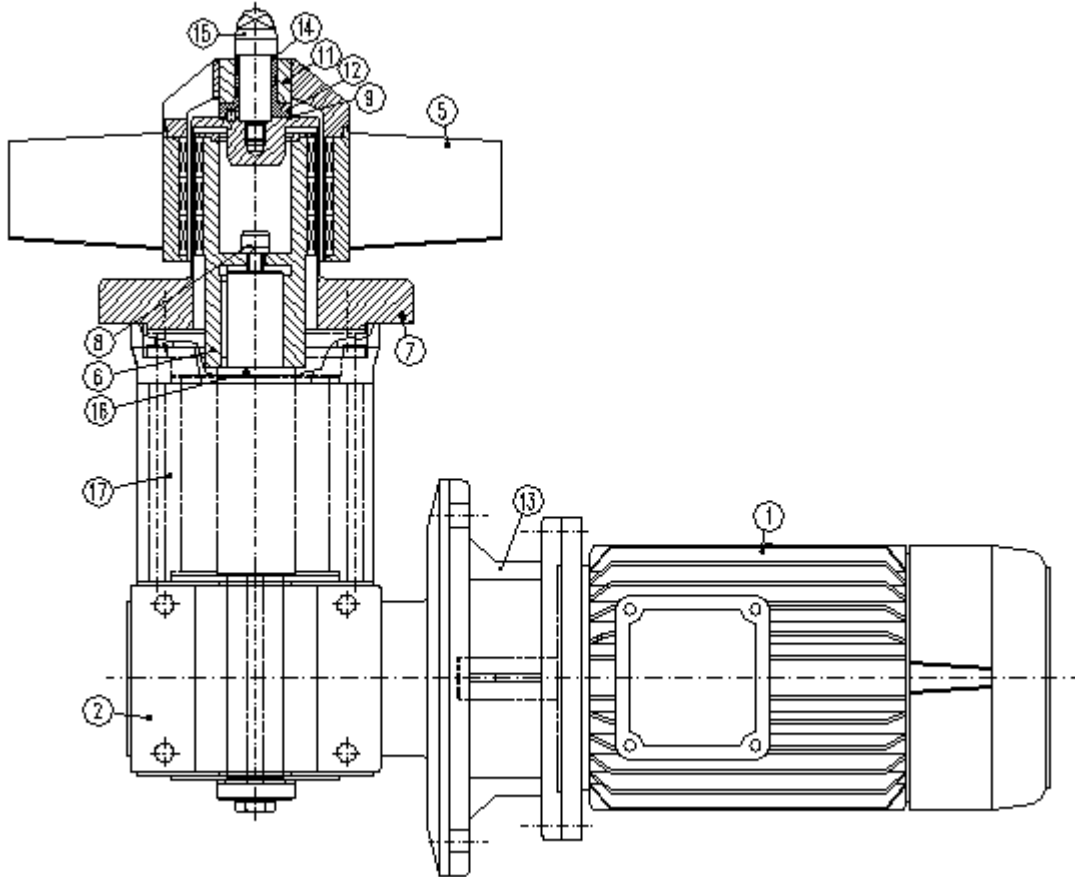

Part No.	Description	Part No.	Description
1	Motor	13	Adapter
2	Gearbox	14	O'Ring
5	Impeller	15	Pivot
6	Inner Rotor	16	Shaft
7	Shroud / Weld Plate	17	Spacer
8	Cap Screw		
9	O'Ring		
11	Bushing		
12	Sleeve		